

Hologram Display

Model:Z3

User manual V1.1

Foreword

Thanks for purchasing our hologram display, please read the user manual for the information on installing and operation.

 
I Product list

Hologram display include :

No	Objects	Quantity
1	Z3 hologram display	1
2	LED Blades	4
3	Bracket	1
4	TF card	1
5	Card reader	1
6	Power adapter	1
7	The Power Cord	1
8	The remote control	1
9	The Screwdriver	1
10	Screws bag	2

Please confirm whether your package is complete. please contact your supplier in time if there is any damage.

II Product Introduction

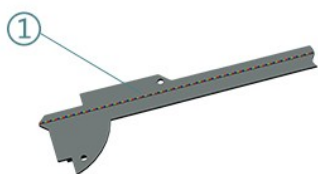

① LEDES



② TF card slot

③ LED board
fixed slot




④ Power Port

Specifications


Model : Z3	
Product weight : 0.75KG	
Pixel Resolution : 1600x720	
Product Size : 650*650*85mm	
Revolution : 650/minute	
Rated Voltage : 12V	Power : 36W

III Installation

 1. Drilling 3 holes on the wall as diagram on the right.

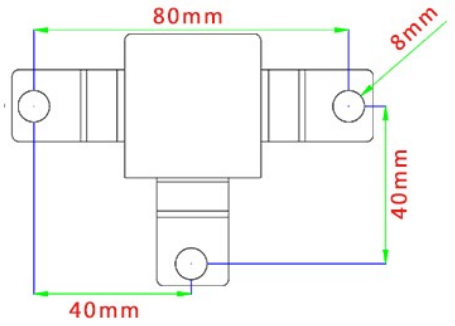

 2. Mount the bracket on the wall by screws.

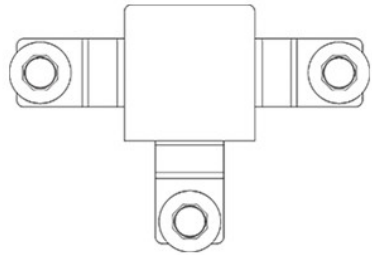


3. Install the LEDS blades into the blades' slots, tighten the screws. (In order to protect the LEDS blades, Install and Remove should be softly).



3. Connet the power cable and hang on the hologram display.



 4. Turn the screw between fixed bracket and hologram display to avert fall off.



Notice:

Do make sure the device is installed on the place not touchable, or it must need a protection cover to keep safety.

 
Convert contents

There are two methods, Computer Convert and Cell Phone App Convert.


1. Computer Convert

Due to video format are various, some of the video format can not play directly, so there is Encoders in the TF card in our display for each model, after converted by our Encoders, the video can play directly, here is the steps of how to using Encoders :

Copy this files in TF card, and paste on computer, then decompressing files.

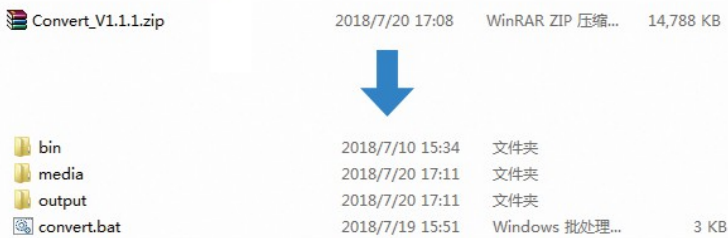

 Put target video into "media" file (please save the original video, because after converted, it will disappear in the "media" file), Encoders support mp4、avi、3gp、mov、mpg、wmv、vob、flv、etc ;

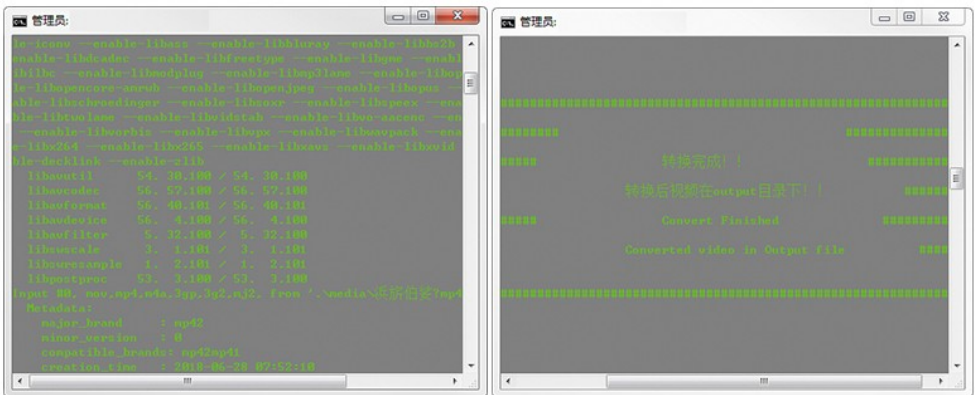

①

②

Double click the "Convert.bat" file, Popup the following window, if convert success, it will appear convert finished words, as image ②, After converted, the video will be in the "Output" file, please copy it to TF card, then can play in display.

2. Cell Phone App Convert



Android

Scan the QR code by cell phone, download the APP then open it.

- ①. Open the APP, you will see the connectable devices under the WIFI list.
- ②. Click the device, after getting connected, the device ID will show above the WIFI List.
- ③. Click the connected device, you will be into the program interface.
- ④. Click the Upload button. will see below as Image 4, Click SELECT THE FILE button to select a video or photo from cell phone, then click Send.
- ⑤. While the progress bar 100% finished, the updating is successful.



①




②



③




④

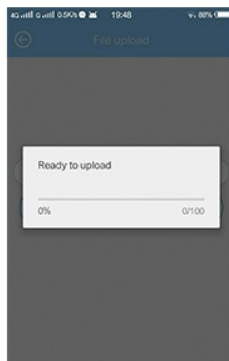

⑤






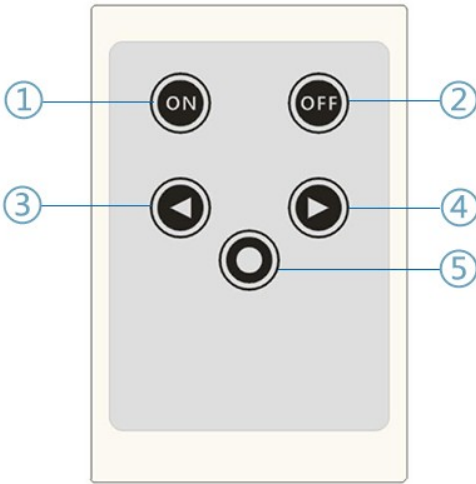



3.The Remote Control

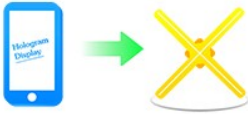Devices remote control can control the devices.



- ① Turn On.
- ② Turn Off.
- ③ Previous.
- ④ Next.
- ⑤ Current Loop play.

4.The instructions of icons

 <p>Means the device is connecting with APP</p>	 <p>Means the device is connecting with the Local Router</p>	 <p>Means the device is connecting with the Local Router succeed</p>
 <p>Means the device is sending the content</p>	 <p>Means the device is sending the content succeed</p>	 <p>Means the device is sending the content failed</p>
 <p>Means the device is going to reset</p>	 <p>Means the device can not read the TF card</p>	 <p>Means there is no content into the TF card</p>

IV Failure analysis

1. Display abnormal, such as blurred screen, picture with gap.

Please formatting the TF card, re-download the content .

2. Show an exclamation mark when you insert the TF card.

It means the hologram display can't read the TF card; Please check that the TF card has been inserted properly or if broken.

3. Hologram display work normally but show you nothing.

Take out the TF card and formatting it, then re-download the content.

V Notes

Tear down or remould

The product is made up of high density components, prohibit tearing down, repair, refit or hard fall to avoid damage.

Use and storage environment

The normal operating temperature of it is $-30^{\circ}\text{C}\sim 50^{\circ}\text{C}$, Please be carefully use it if out of this range.

Do not use or storage it under high temperature, high pressure, strong magnetic field, dust and humidity.

Machine Maintenance

1. Do not use sharp objects to scratch on the surface of the machine.
2. Please wipe with a soft dry cloth if there is dirt, stain or water droplets on the surface of the machine.
3. Do not use volatile organic solvents to clean the machine surface, such as gasoline and alcohol.

WARRANTY CARD			
User	Name:		Product Model:
	Invoice Number:		Purchase Date:
	Address/Zip code:		
Service	The date of repair	Failure description and handling information	Service Person

*Under warranty, the product will get free repair if it be used normally. This warranty shall be rendered null & void if:

1. The product is physically damaged.
2. The product is installed, maintained and operated in ways other than as recommended by us.
3. The product is faulty or damaged due to other occasional problem that not related to manufacturing.
4. Turn the screw between fixed bracket and hologram display to avert fall off.